

# Geo Mobile Glass Whiteboard / GEOM

## Installation Instructions




### Tools Needed:


- Hammer/Plybar (To Open Crate)
- Suction Cups (Optional)
- Power Drill (To Open Crate)
- Phillips Head Driver Bit

**Installation Time:** 10 Minutes maximum for 2 technicians per unit.


**Step 1:** Remove crate/packing from around unit, un-box glass, marker tray and accessories.

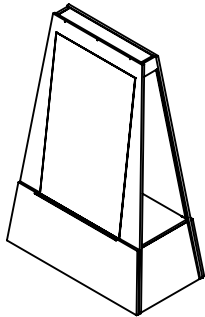

(1)  
Frame Assembly

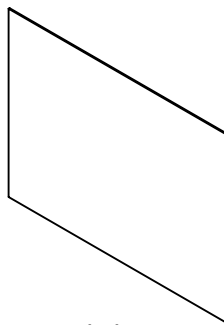


(2)  
Glass Panels

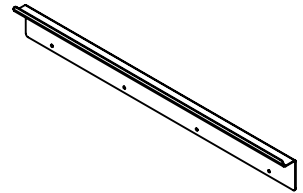

(2)  
Marker Trays

**Step 2:** With 2 technicians, lift frame assembly off pallet onto floor.

**Step 3:** Insert glass into each side of unit. Suction cups are recommended for glass handling.

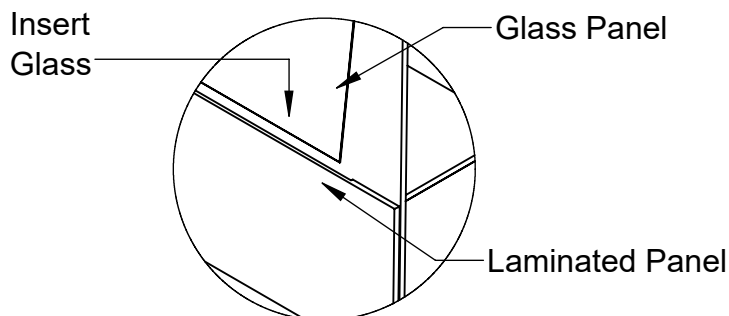

**Step 4:** Carefully insert marker tray between glass and laminated panel on each side.

**Step 5:** Recycle all packaging in accordance with local regulations.