



Roam Mobile Whiteboard

Instruction Sheet


Step 1: Placing the board upside down, locate the inside slots of the tray and insert legs.

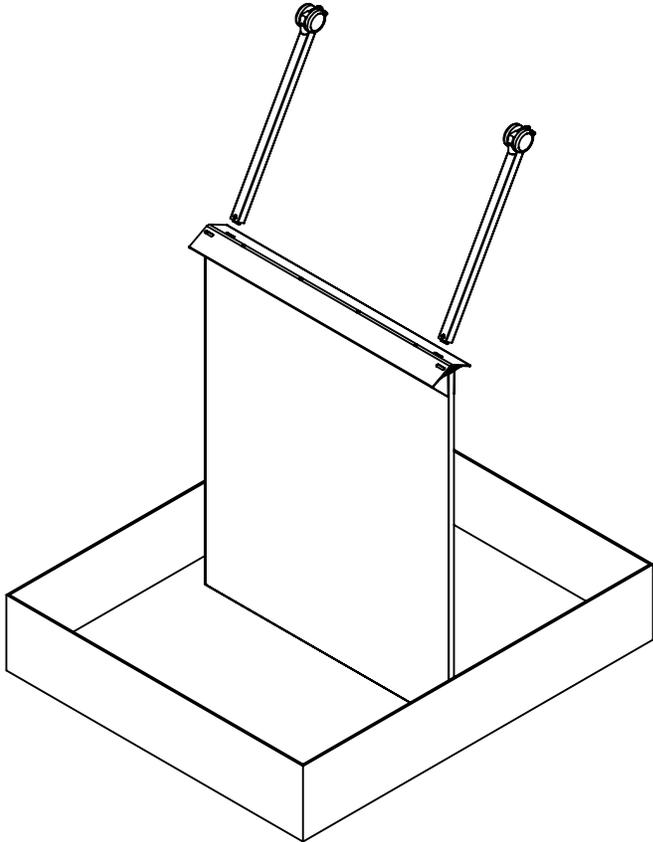


Step 2: Center the legs in the slot for a tight and secure fit.

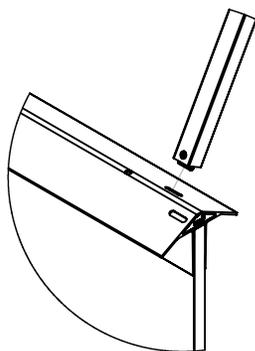

Step 3: Use the included wrench to tighten the socket screw. The screw must be completely tightened for a secure leg connection.

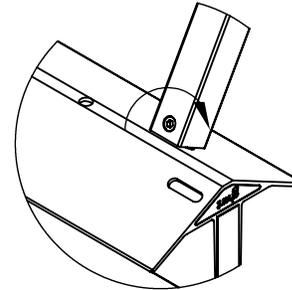

Step 4: Repeat steps 1-3 for the outside legs.

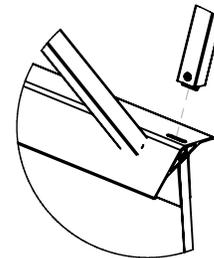

Step 5: Once all the legs are securely attached, turn your board rightside up.

