




Step 1: Remove and unpack all items and hardware

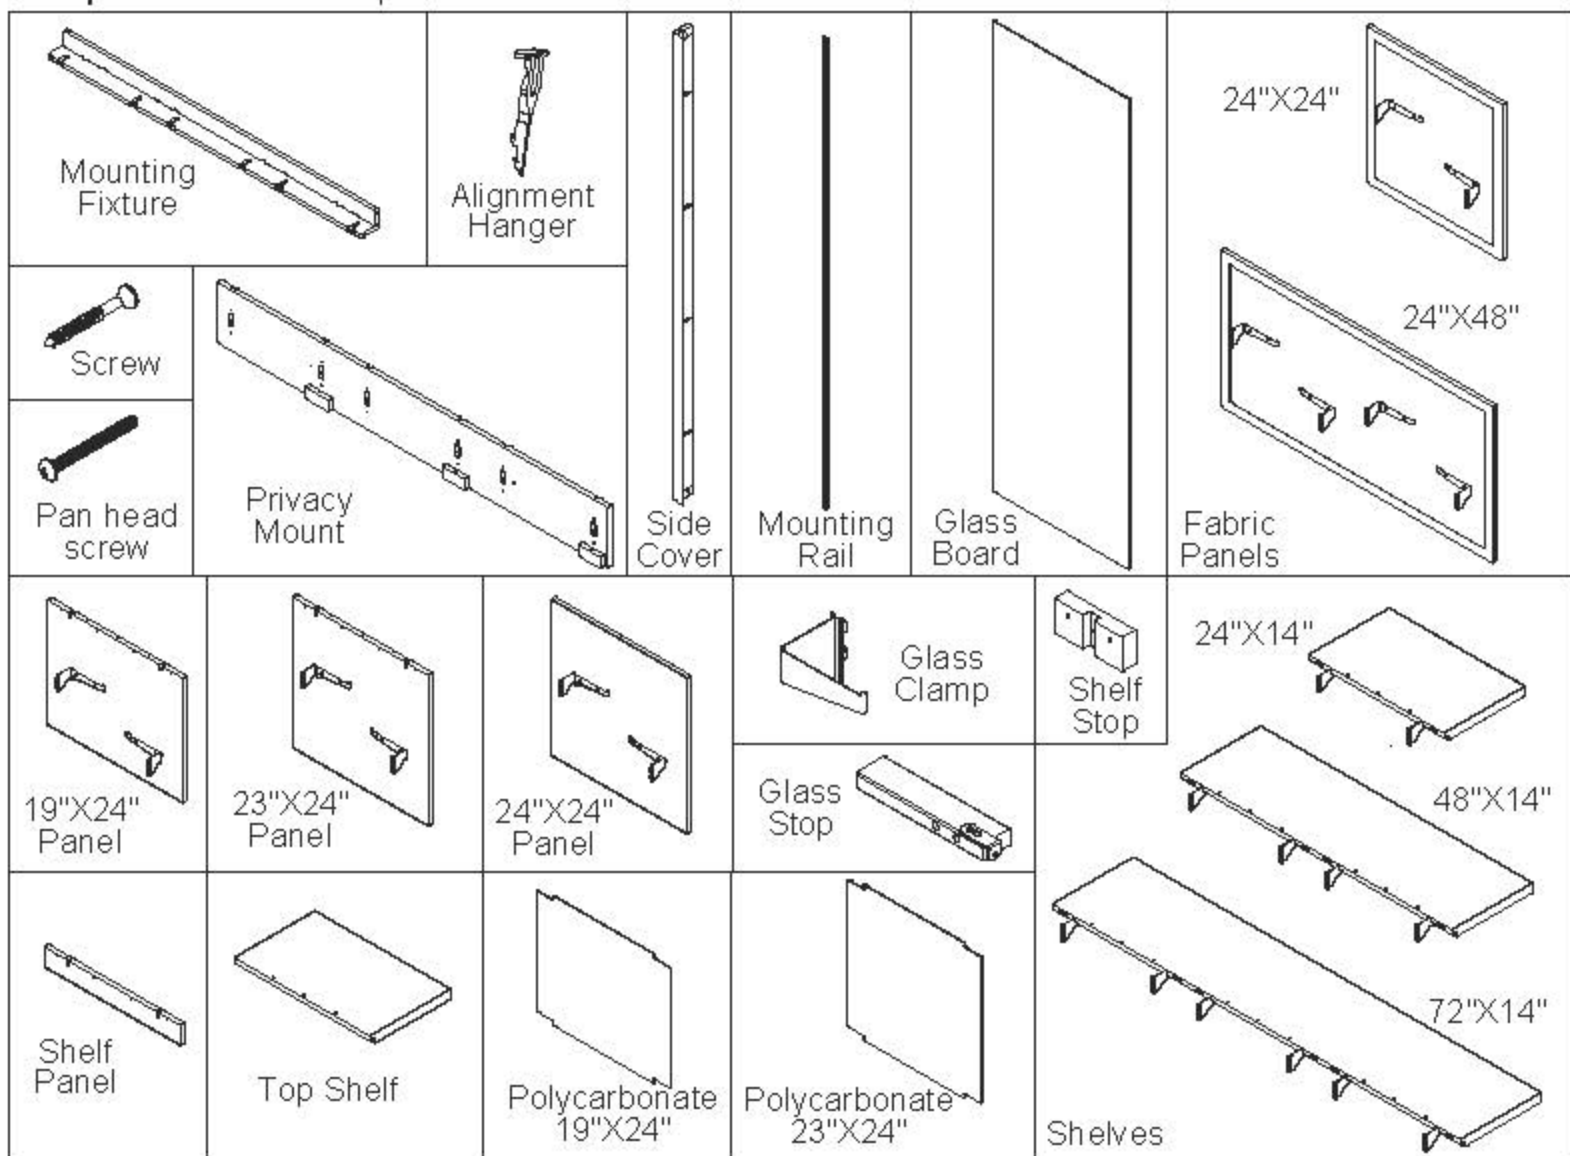

Step 2: Scribe a horizontal line onto the selected wall as listed below. Hang the mounting fixture with a level so the bottom edge is aligned with the scribed line.

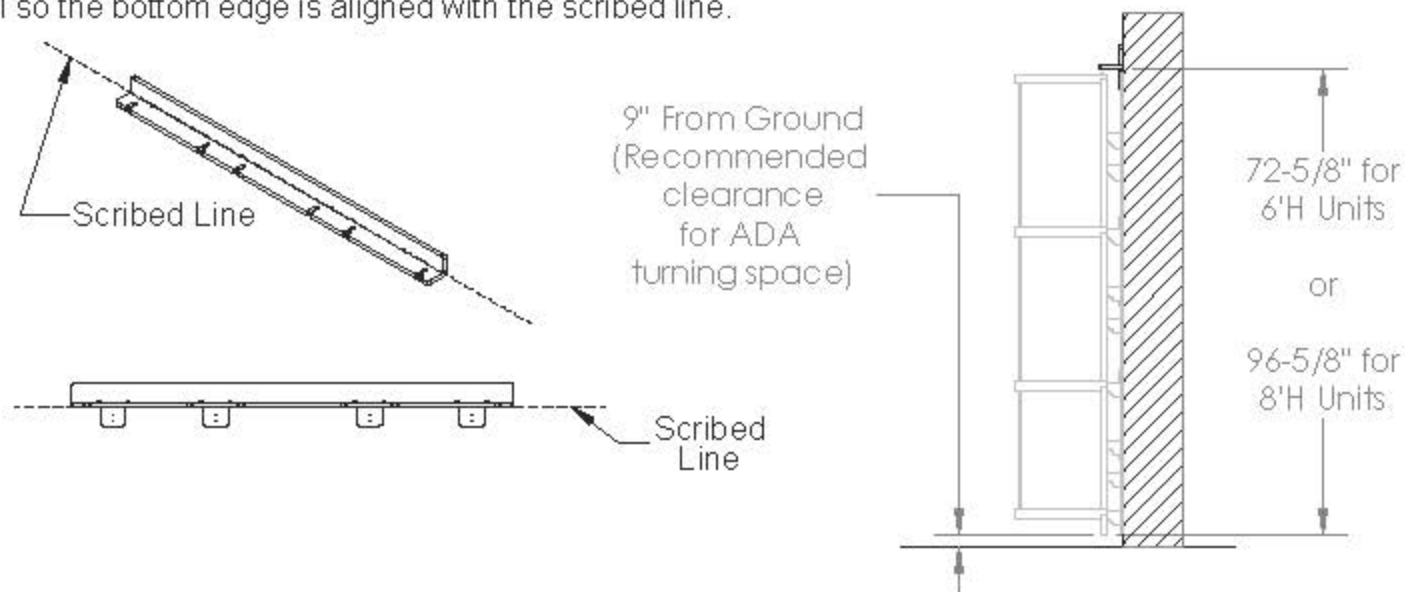


Step 3: Add the mounting rails using the 3D printed alignment hangers. Then attach the privacy mount at the bottom of the unit. Ensure mounting rails are vertical.

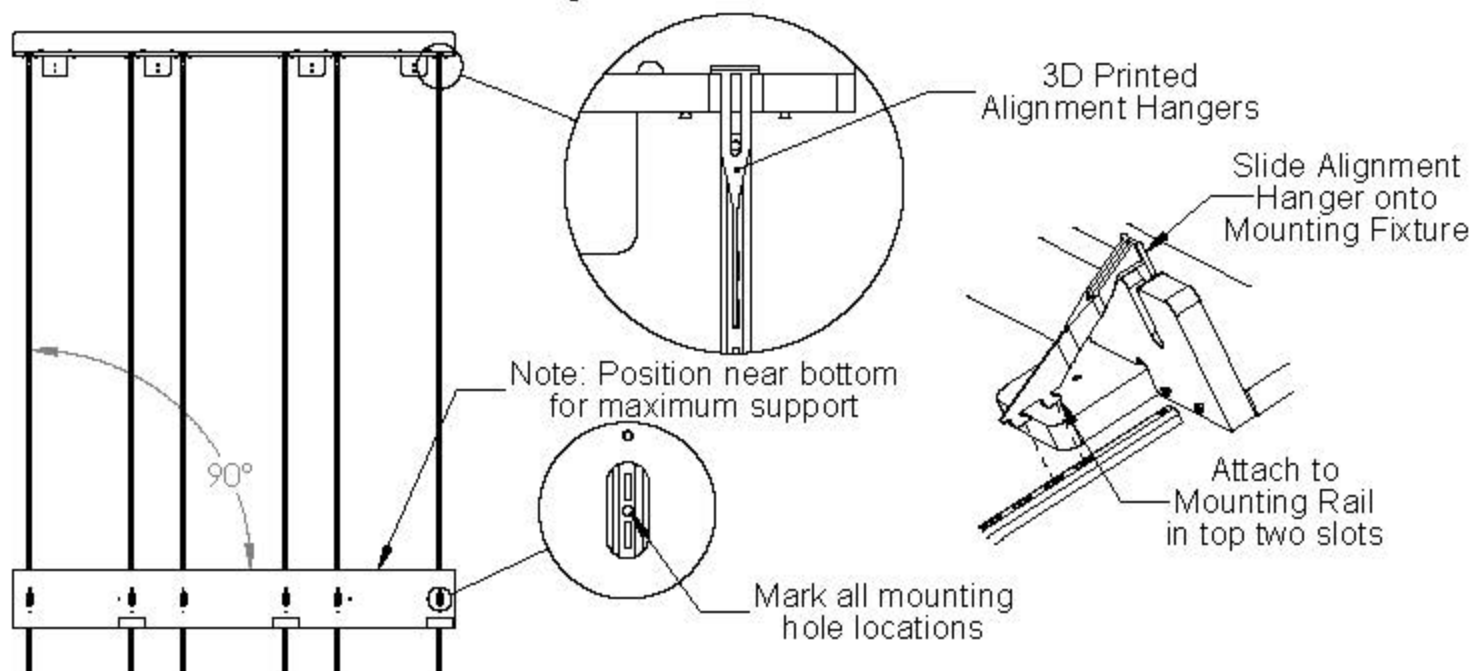


Optional (Step 4): If the Mounting Rails are not positioned directly in front of wooden studs then install anchors as needed.


- Label the Mounting Rails from left to right (1, 2, 3 ... / A, B, C ...) to denote the order.
- Mark all needed hole locations with a pencil or narrow permanent marker.
- Remove the Mounting Rails and drill holes for the anchors using a 3/16" drill.
- Attach the anchors and fully seat them using a mallet.
- Reattach the standards in the proper order to ensure mounting hole alignment. **(Critical)**

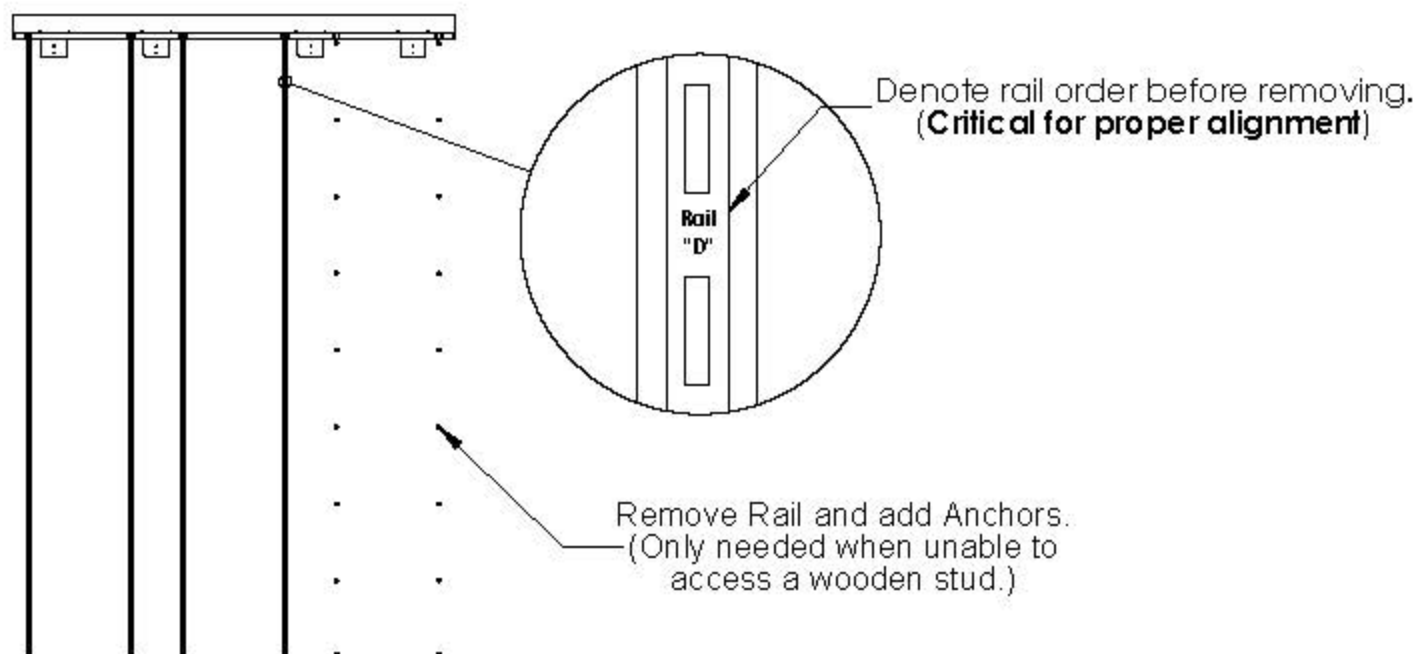

Step 5: Remove the Mounting Fixture and all Alignment Hangers. Then install the Privacy Mount to cover the top edge of the Mounting Rails as shown. Use additional drywall anchors as needed.

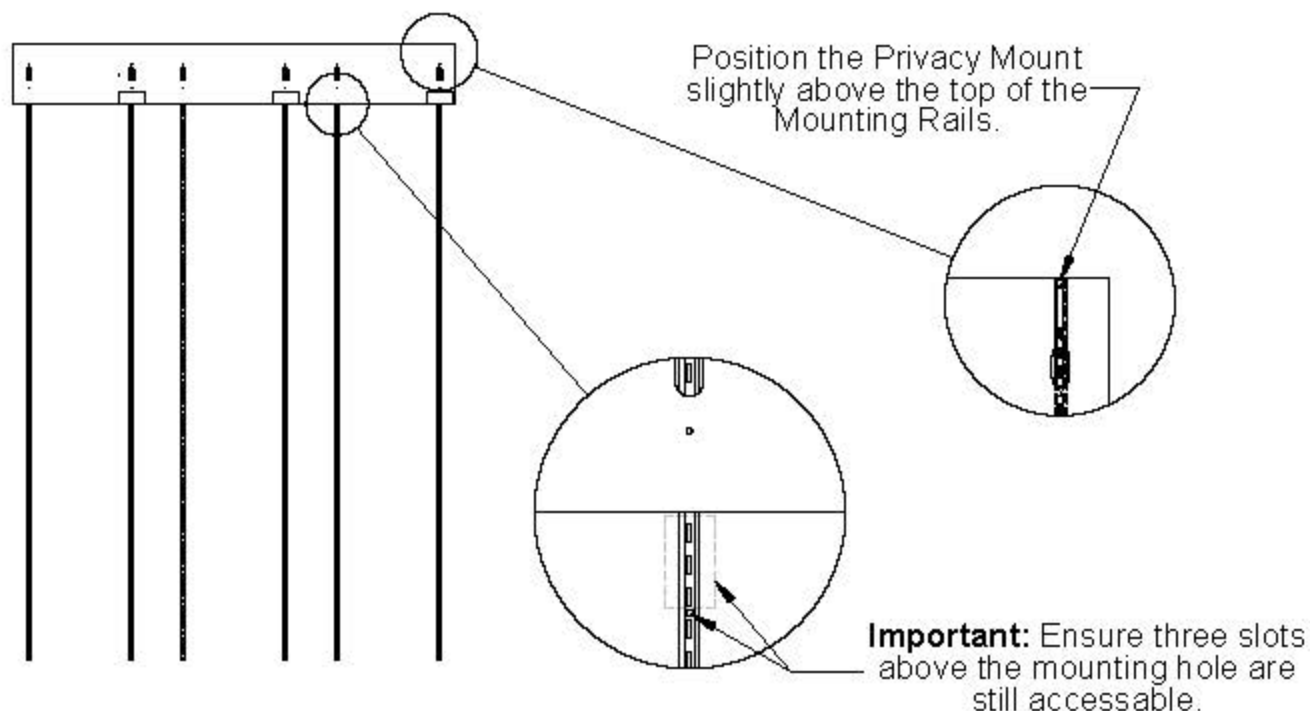


Step 6: Attach the Side Covers and align the lowest edge with the bottom of the Mounting Rails.

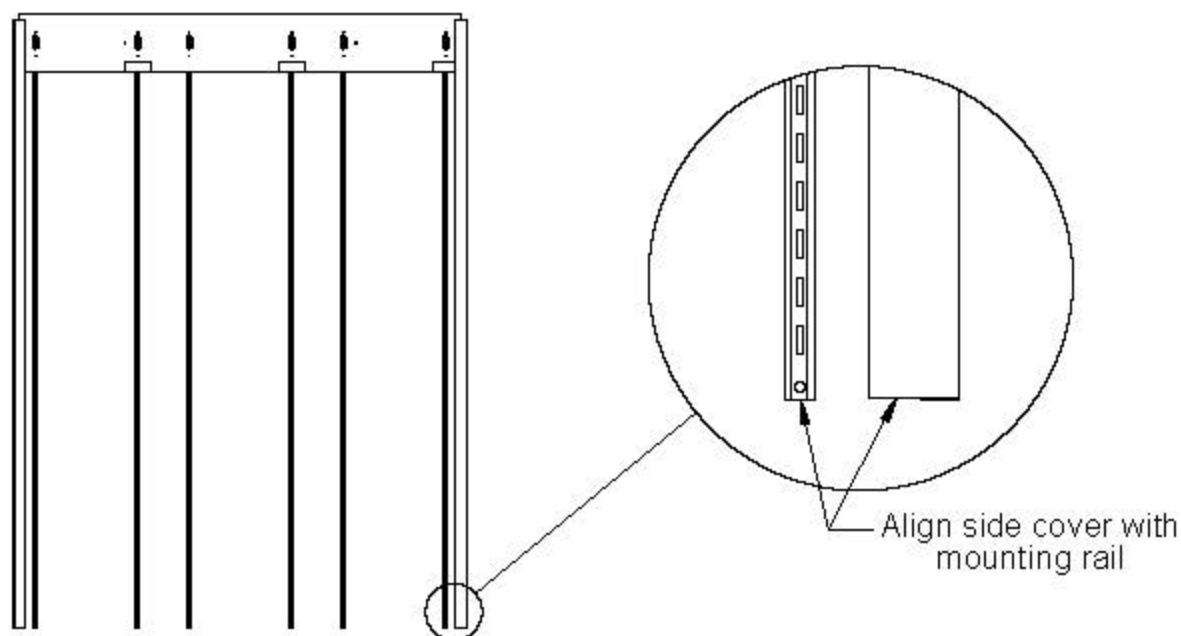


NOTE: Before proceeding review layout diagrams on final page.


Step 5: Assemble bottom most shelf as shown.

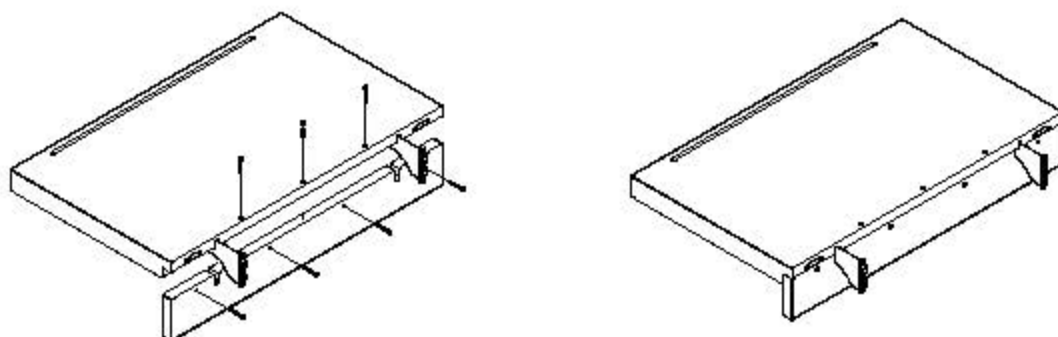


Step 6: Attach bottom shelf and stops. Screw in left and right holes for the stops first before the center.

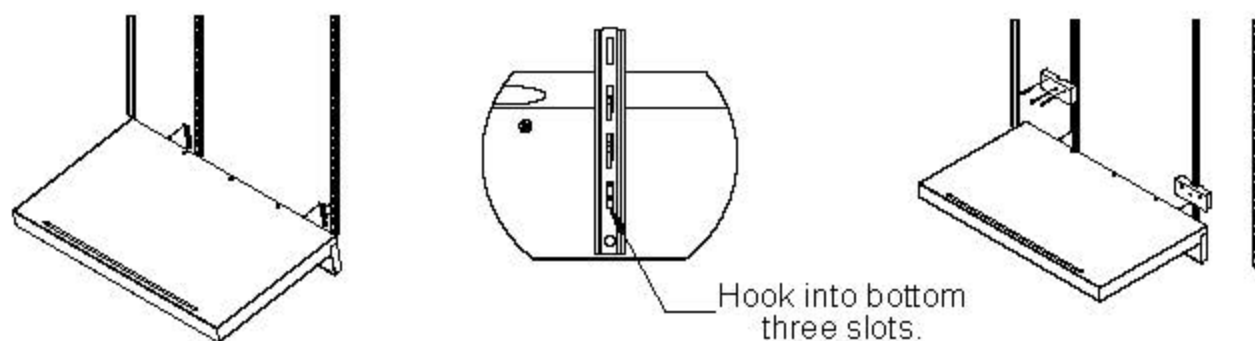


Step 7: Attach bottom panels. Ensure that the hooks are attached to the proper slots so that the bottom of the panel is about 1/8" below the rail.

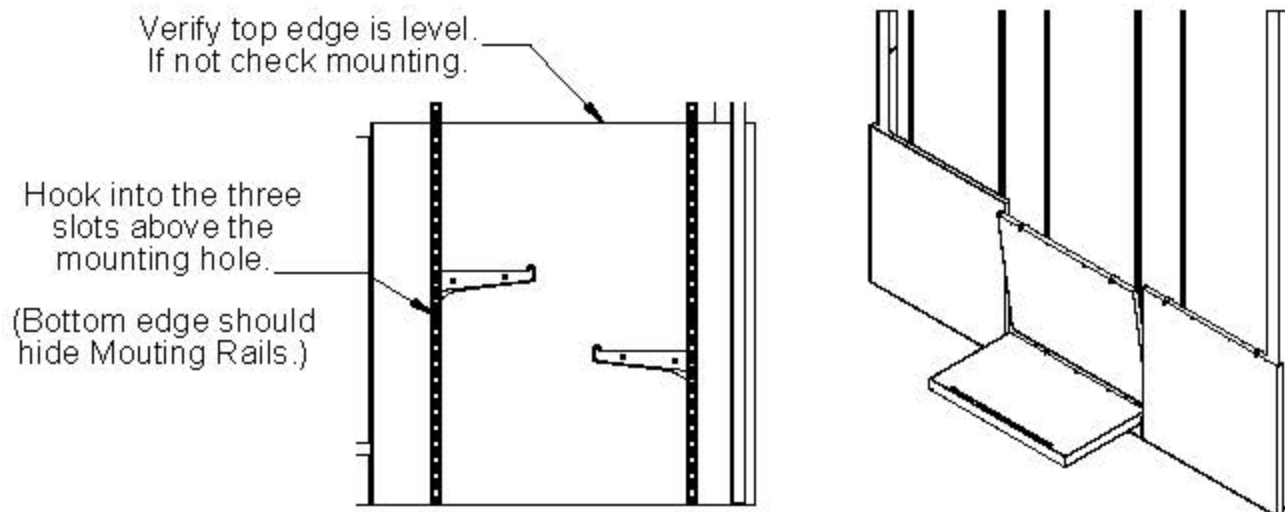


Step 8: Insert polycarbonate and capture its top within the next shelf as shown.

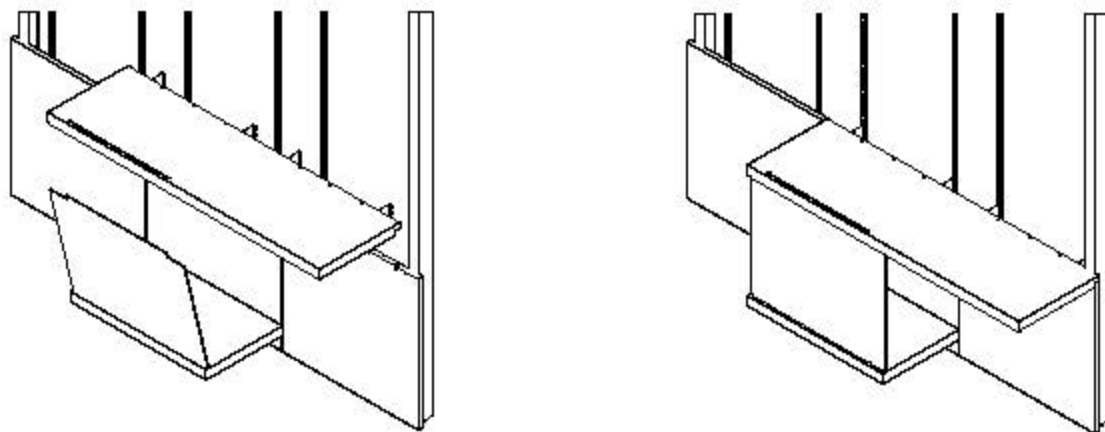


Step 9: Insert screws to connect the shelf to the vertical panels underneath. Ensure panels are fully straightened before fastening. Then mount Shelf Stop.

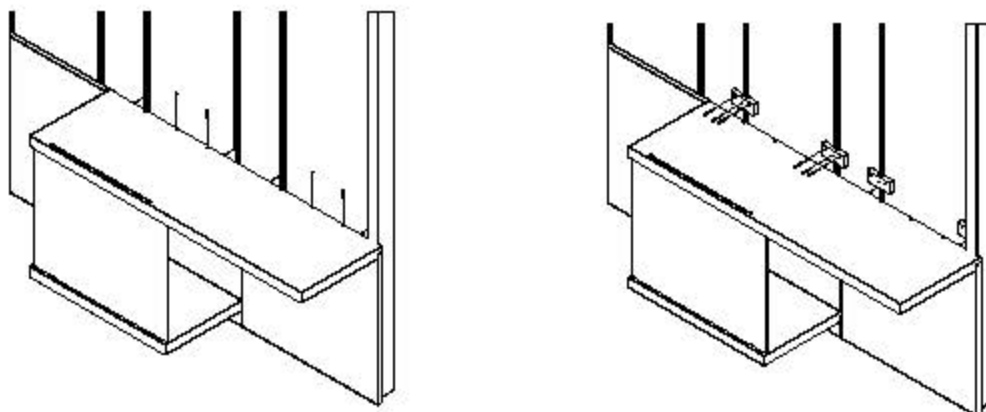


Step 10: Continue installing panels, shelving, polycarbonate and appropriate hardware as necessary.

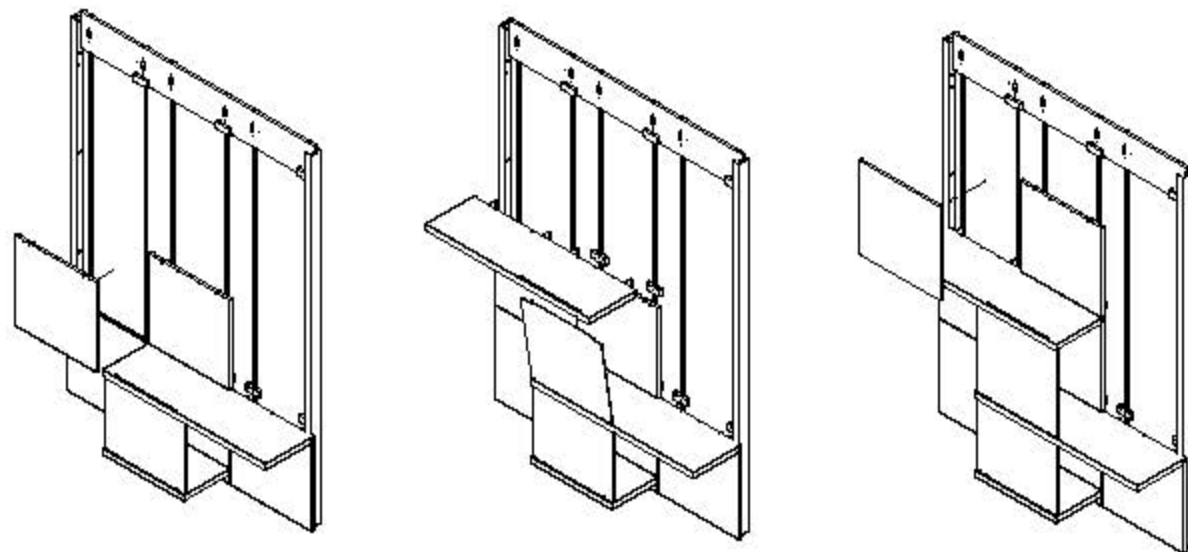

Step 11: Assemble Top Shelf. Add a Tip Restraint Bracket and install the final Polycarbonate panel. Then install the Top Shelf onto the Mounting Rails.

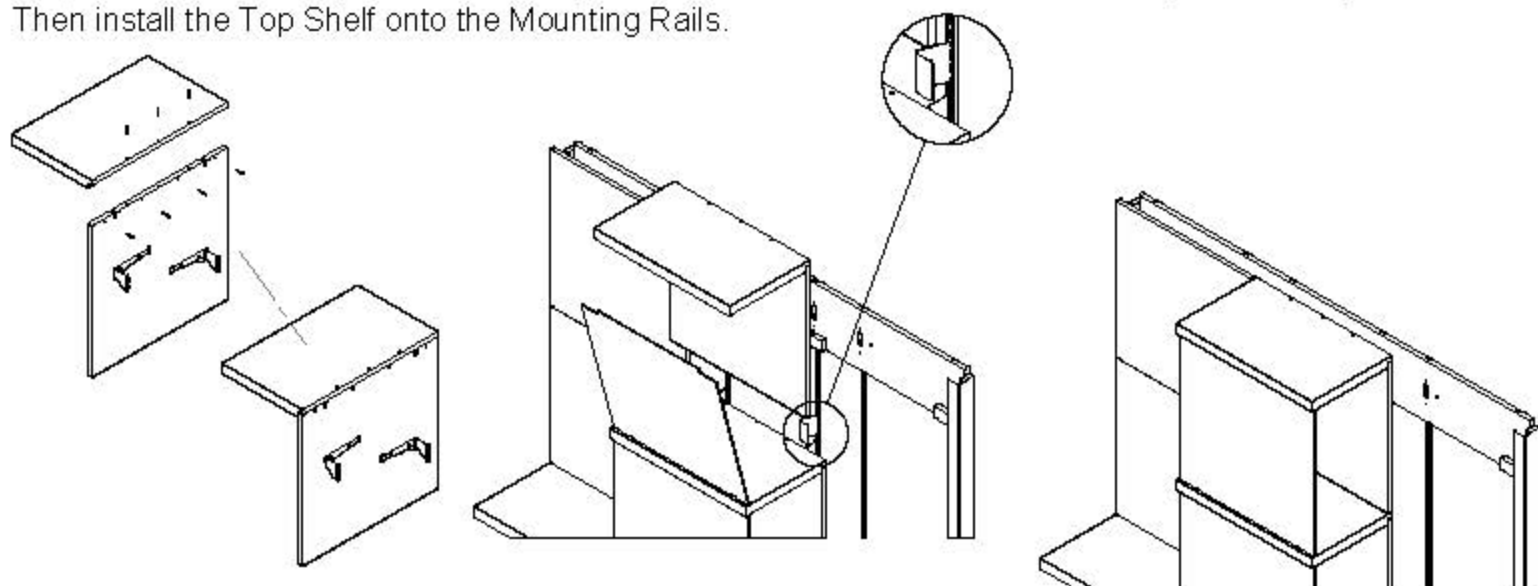


Step 12: Insert glass brackets. (If applicable)

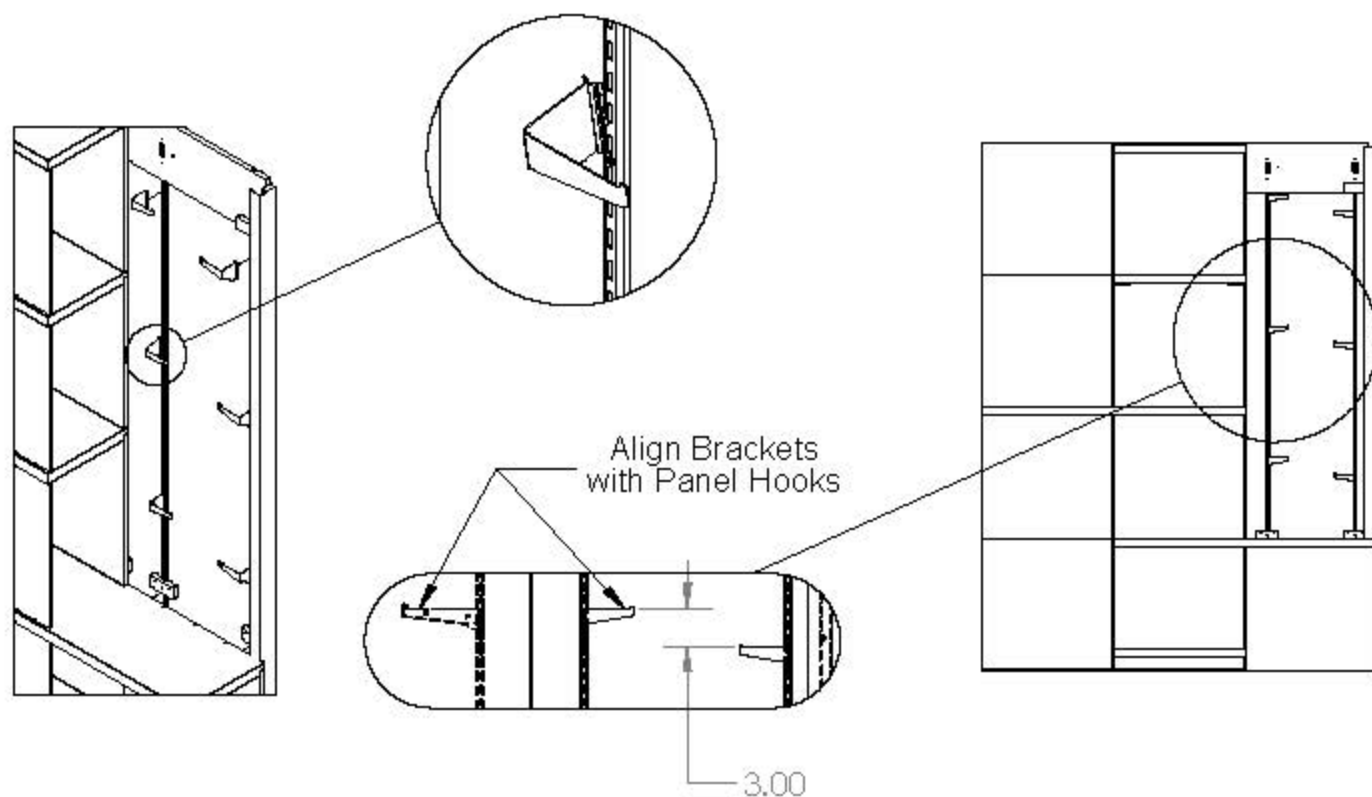


Step 13: Assemble and install the Glass Stops as shown below. (If applicable)


Attach as shown for glass located on the right hand side.
(Flip over for glass on the left.)

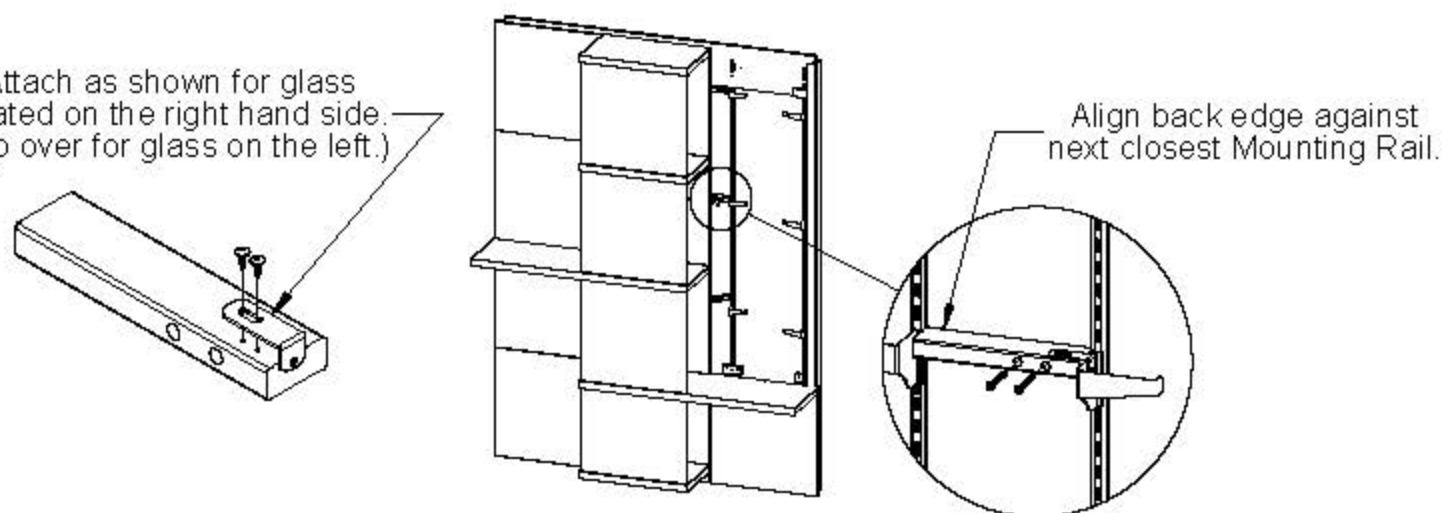


Step 14: Install Glass by carefully hooking onto the Glass Clamps. (If applicable)

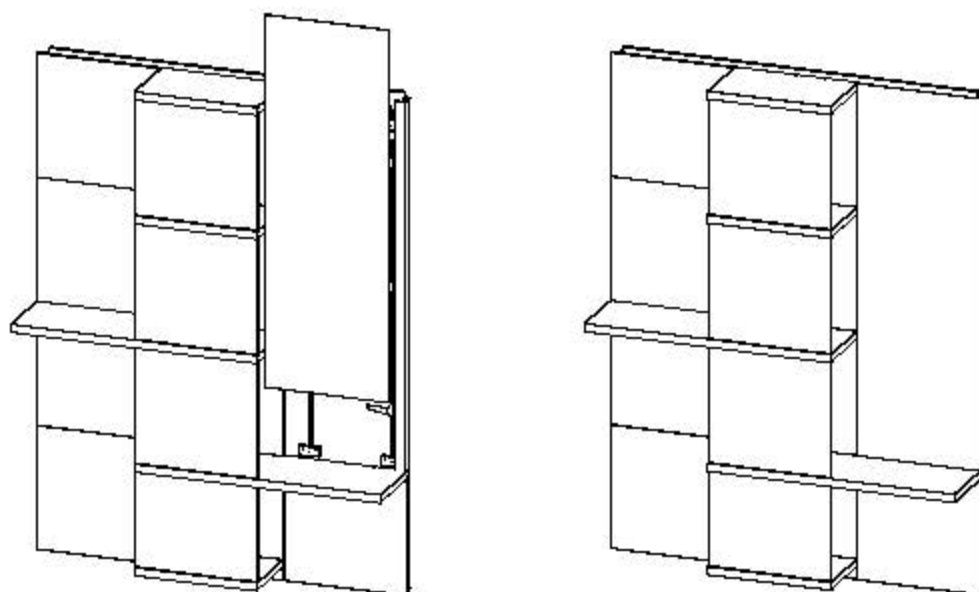

Step 15: Tighten top screws to secure structure. This is needed on all locations except for glass.

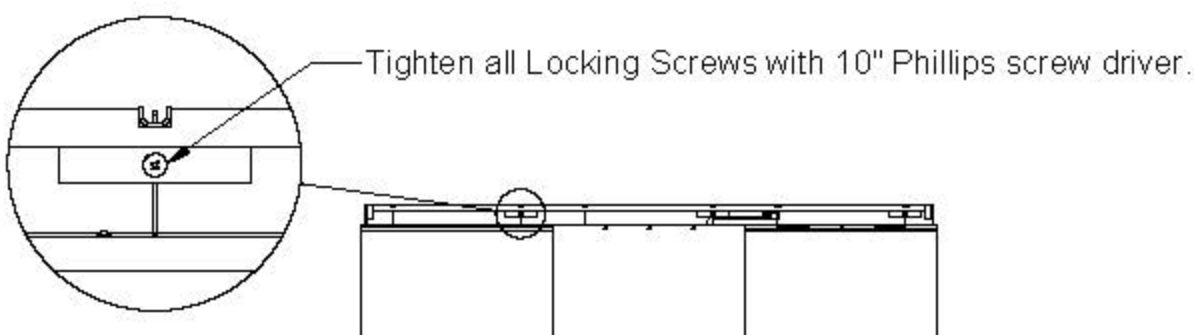

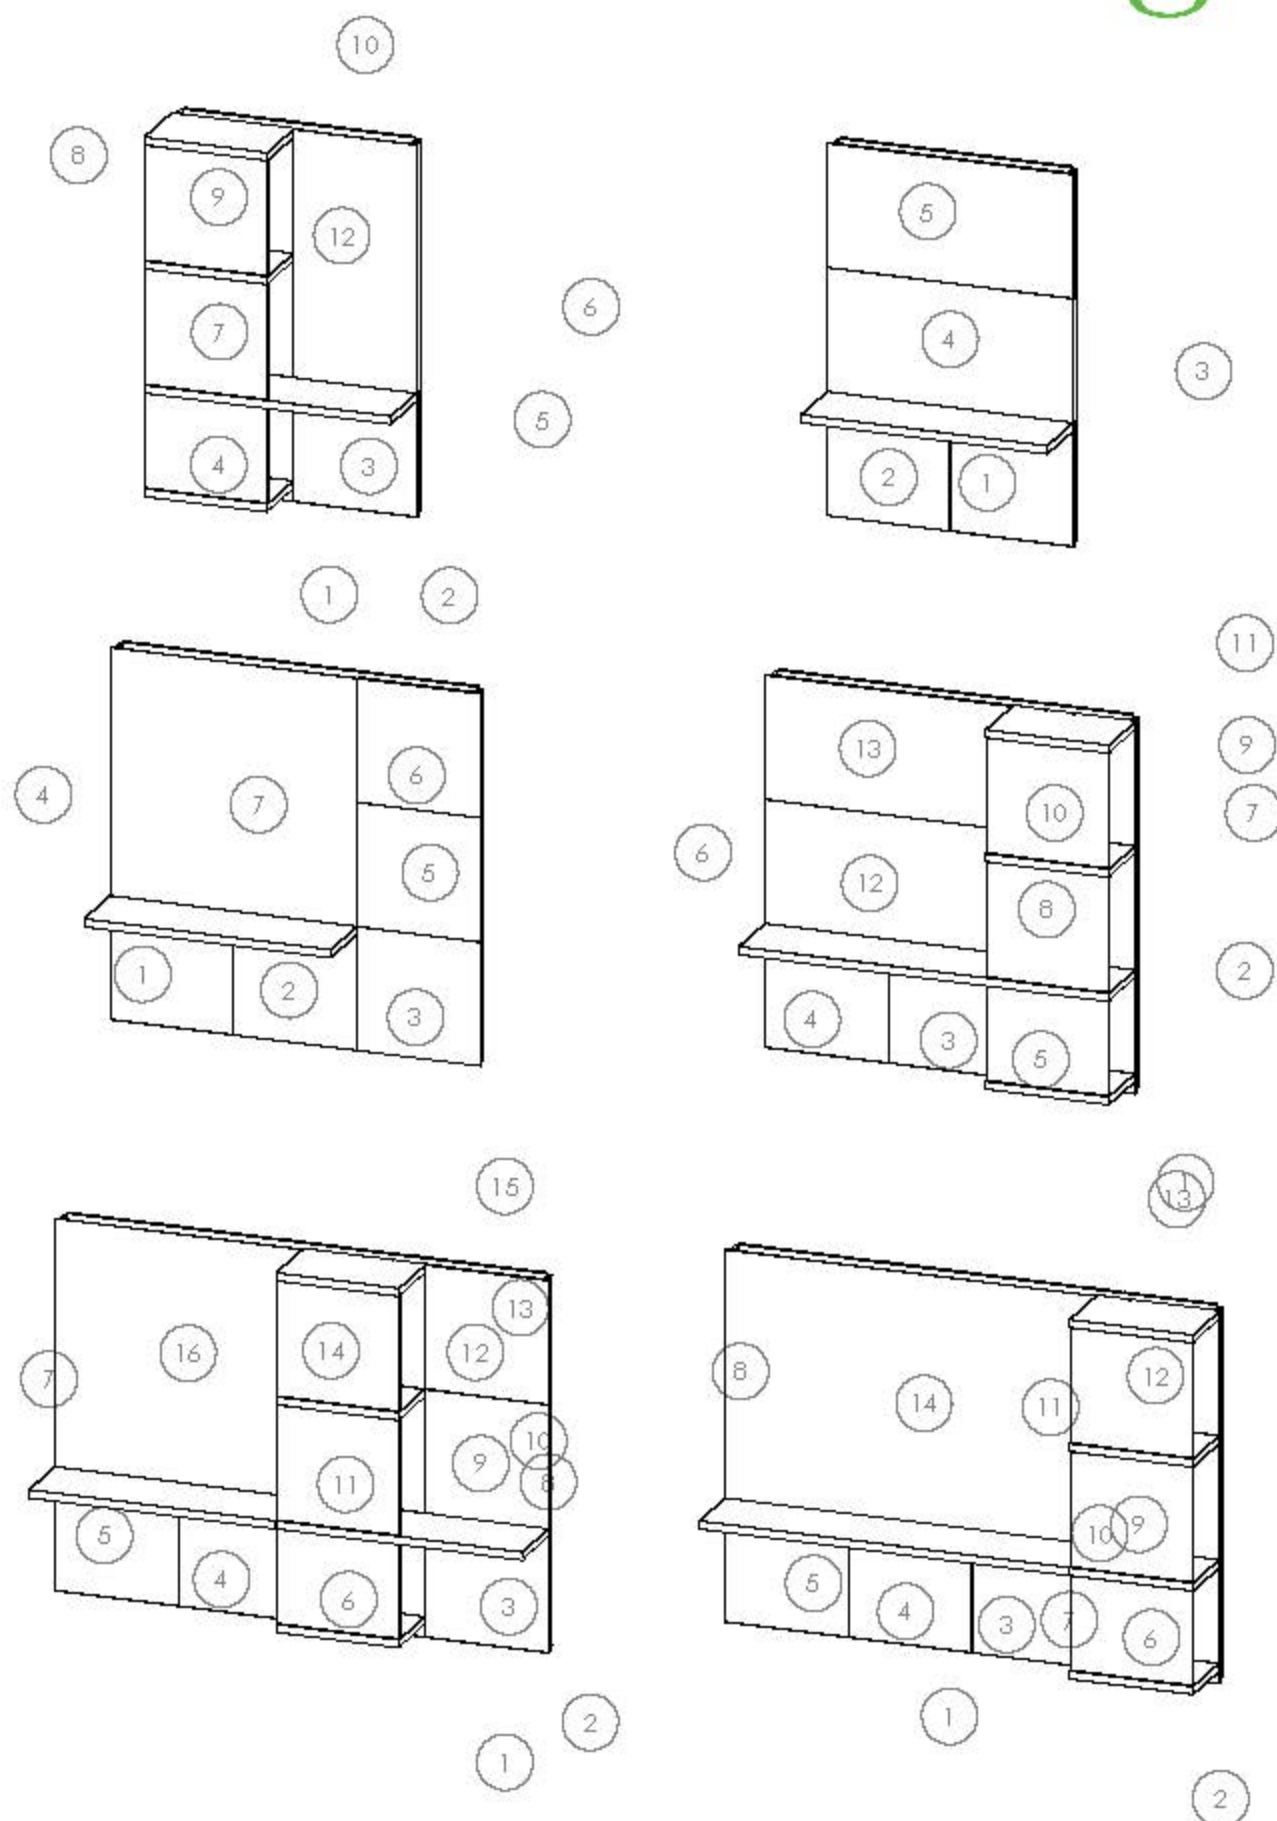

Panel Installation Order

